



Mast heel base setting: 3522mm

(Squib 819)

SQUIB TUNING GUIDE

Measured from aft face of mast, at the base, to top of transom. Over the traveller.



Running Rigging	Main halyard	Jib Halyard	Kicker	Outhaul	Cunningham	Jib Cunninham	Barbers	Traveller	Mainsheet tension
5-9 knots	1cm down	loose	slack	ease 1cm	off	slight tension	in	up	centre
10-14 knots	Black band	base	snug	hard	off	moderate	in -3cm out	up	centre
15 -20 knots	tight	tight	hard	hard	trimmed	hard	5-10cm out	1/4-1/2 down	centre-1/4
20+ knots	tight	tight	v.hard	hard	hard	hard	10-25cm out	1/2 down	1/4-1/2 down

Standing rigging	forestay	caps	inners
5-9knots	down 1	base	base
10-14knots	base	base/down 1	base/down 1
15-20knots	plus 1	down 2	down 1
20+ knots	plus 1	down 2 or 3	down 1 or 2

Forestay: Lay your forestay and your forestay attaching chainplate down the front of your mast, measure from the base of your tenon to the bottom of the chainplate this should be 13cm.

Base setting: In order to find your base setting, we suggest you locate your port cap shroud and then your starboard by pulling slightly on the backstay, you will not locate it otherwise. Mast should be in the middle of the gate. For your inners pull the mast forward until it is stopped 2-5mm from the front of the gate.

Email: Jackgrogan@hydesails.co.uk

Phone Jack on: 07525178908